

Sprite III

WAREWASH DISPENSING SYSTEM

Quick Start Guide




How to Use This Quick Start Guide

This guide is intended for those who are familiar with installing and using dispensing systems. It provides a quick overview of the installation and use of the Sprite III. Brief instructions for each step are within this guide. For more complete information, please refer to the *Sprite III Reference Manual*.

Follow these steps to begin using the Sprite III:

1. Install mechanical and electrical portions of the system.
 2. Familiarize yourself with the three buttons on the keypad and with the User Screens.
 3. Within the Program Mode Screens, familiarize yourself with the Configuration Settings and Adjustment Menu (probe or probeless) that you will use. Note the name of the function listed above each numbered screen.
 4. Input the Installer Password.
 5. Press the Scroll key to change the blinking digit to “2.” Set Configuration Settings, including detergent control (probe or probeless), machine type (door or conveyor), detergent type (liquid or capsule) and third-product pump selection (with rinse, detergent or disabled).
 6. After setting the configuration, you need only program adjustments that apply to your system.
 7. Press the Scroll key to change the blinking digit to 3 (Probe Adjustments) or 4 (Probeless Adjustments). Set adjustments as needed.
 8. Press the Enter key to return to the main menu. To exit, wait 30 seconds; the menu will automatically return to the Home screen after 30 seconds of inactivity.
- Refer to the *Sprite III Reference Manual* for information on troubleshooting, maintenance, service, parts and warranty.

Program Mode Screens

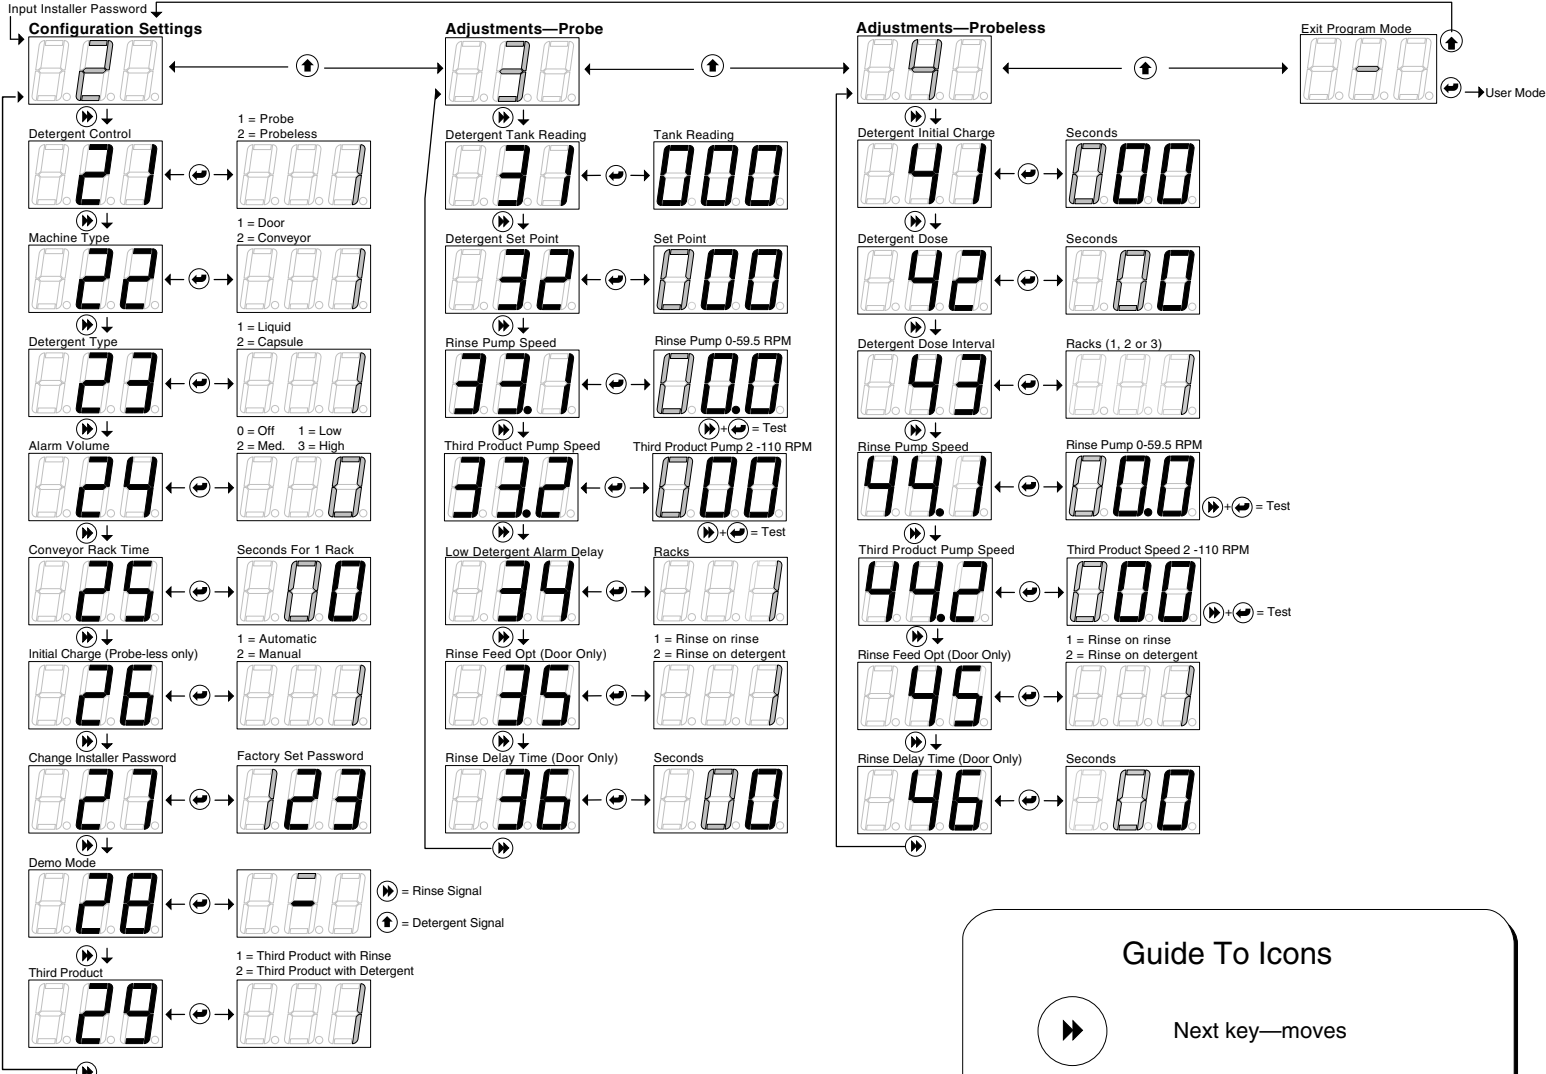

Guide To Icons



Next key—moves



Scroll key—changes



Enter key—action



Gray (left) digit indicates blinking

Set Value Screens

Moves Blinking Digit (when applicable)

Enter Screen



Set Value/Exit Screen

Changes Digit Value

SPECIFICATIONS

Dimensions

Size: 8" wide x 9" high x 6" deep

20.3 cm wide x 22.2 cm high x 15.0 cm deep

Weight: 6 lbs. (2.72 kilos)

Temperature: 120° F Maximum

For complete Environmental Specifications, refer to the *Sprite III Reference Manual*.

Power Requirements

Total amperage draw during operation is 100 to 240 VAC nominal (+/- 10% fluctuation), 50/60 Hz. 1.0 amps (max).


Pump Flow Rates

Rinse Pump Flow Rate: 0.5 mls/revolution

Detergent Pump Flow Rate: 6 oz./min. (178 mls/min)

Third Product Pump Flow Rate: 0.10 oz./min. to 6 oz./min. (3 mls/min. to 178 mls/min.)

Complete System Diagram

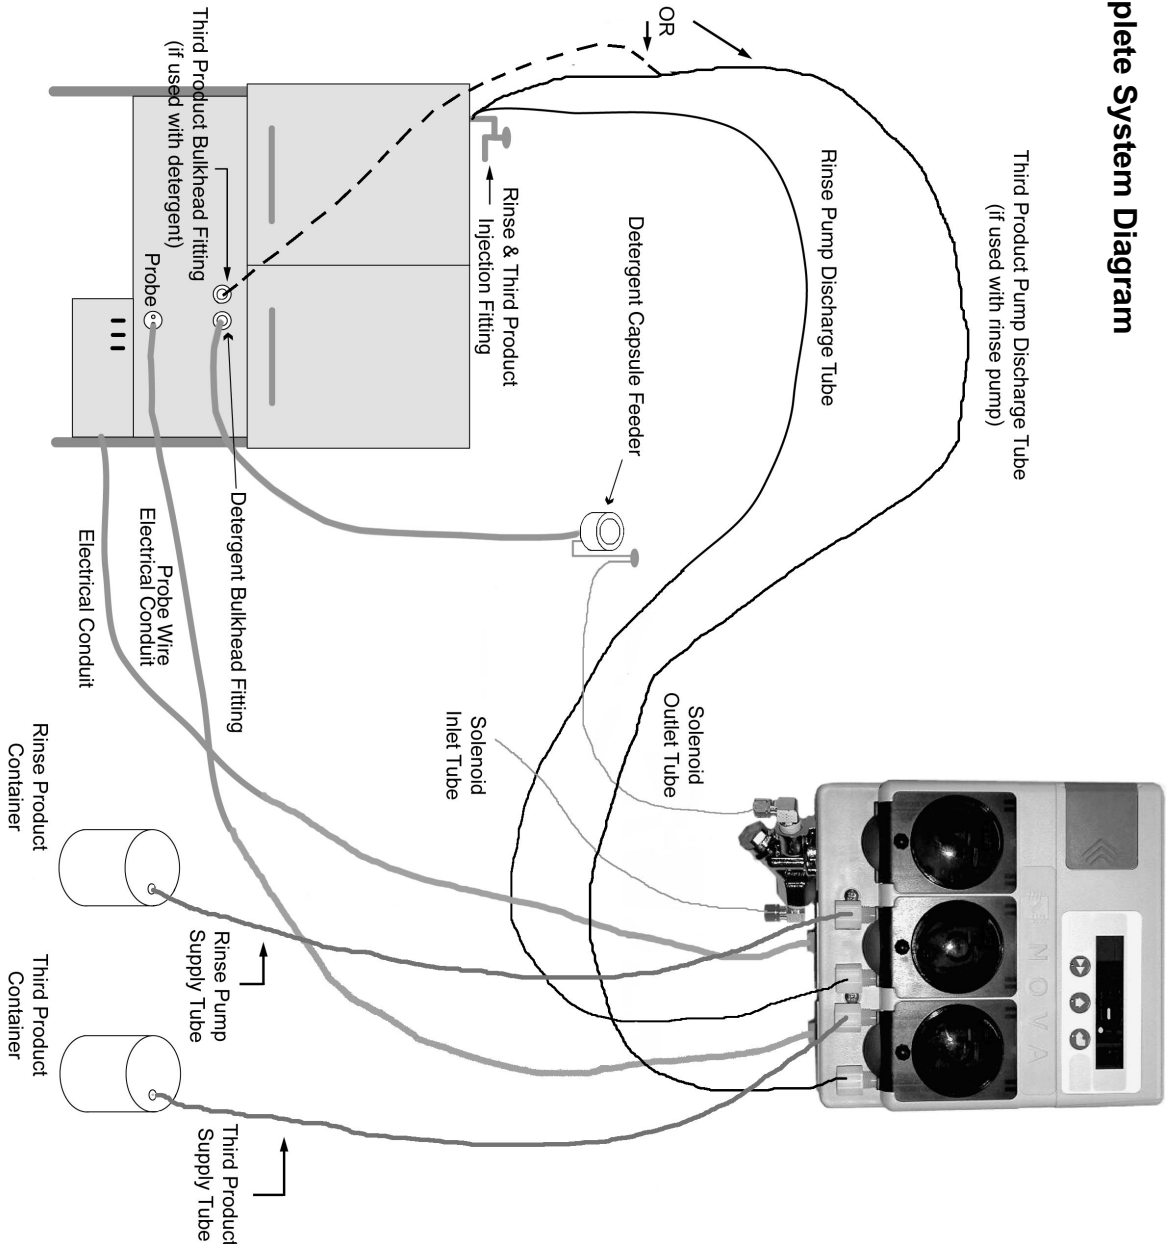

Mechanical Installation

Caution: Disconnect power to dish machine and dispenser during installation or any time cabinet is opened.

Step 1—Wall Mounting Unit

1. Install dispenser near product containers and at a height for easy service access.
2. Place, level and install mounting bracket.
3. Lower dispenser onto bracket. Press down to lock in place.

Mounting Bracket



Rinse Injection Fitting



Lock Button

Compression Fitting (tube from pump)

Level


Threads into rinse plumbing

ELECTRICAL INSTALLATION

Caution: Disconnect power to the dish machine and dispenser during installation or when ever cabinet is opened.

Verify all voltage sources with a meter.

All electrical connections (except the probe) must be made either in the dish machine control circuit panel or an external junction box. The dispenser is pre-wired with a multi-conductor electrical cable that must be run through a conduit to the hard-wired connection on the dish machine. Use a 1/2" (13 mm) ID flexible, water tight conduit that meets all local and national codes. A conduit fitting is present on the bottom of the dispenser where the power cable exits. The probe wire is also pre-wired and must be routed to the probe location and cut to fit. The SPRITE III is available in two different wiring versions: terminal block or wiring cable.

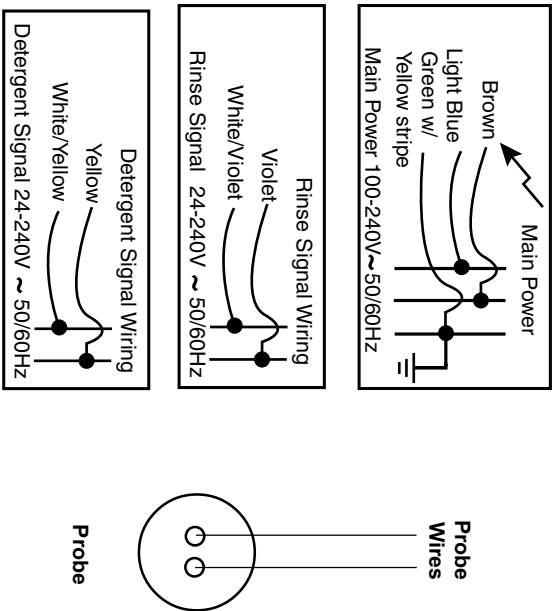

DESCRIPTION OF CONTROLS

The keypad below displays and controls dispenser functions. Blinking digits prompt you to input a value with the Scroll key. Use the Next key to move to the next digit. When the value displayed is the one you wish to store, press the Enter key to set the value and return to the main menu.



Next Key

Display User or Program menus Move through each screen (screens without blinking digits.)

Scroll Key

Change the blinking number displayed (0-9). Start Probeless Manual Initial

Enter Key


View and change settings. Set value and exit program. Start and stop pumps and prime.

USER MODE OPERATION

In User Mode, the SPRITE III displays the operating status and dispenser alarms and gives access to the User Mode Menus.

Note: Press any key to silence alarm!

User Mode Alarms and Status Indicators

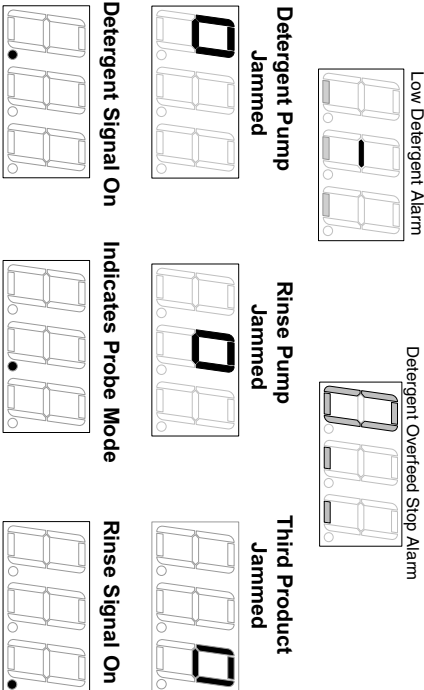

User Mode Menu Screens

Start detergent, rinse and third-product prime. Activate manual initial charge (probeless mode). Input factory set password.

Inputting the Factory-set Password (123)

Press and hold the Enter key for 2 seconds. Three zeros will appear. Press the Scroll key to change the blinking digit to a "1." Press the Next key to move to the next digit. Continue until "123" displays. Press the Enter key to set and return to Program Mode. If you change the password, make note of it!

